



User manual



CHAIN BLOCK

CLCB005F - CLCB010F - CLCB015F - CLCB030F - CLCB050F

The following information does not claim to be exhaustive. Further information about chain blocks should be taken from the relevant employers' insurance association and state regulations.

Intended use:
For anchoring and lifting loads only

→NOTE!

For incomplete machines, the assembly/installation instructions can be found in the 'Assembly' section.

© by Carl Stahl GmbH
Tobelstr. 2 · D-73079 Suessen (Germany)
www.carlstahl.com

The original operating manual is in German.
Versions in other languages have been translated from the German original.
A copy can be requested in writing from Carl Stahl.
Subject to modifications.

Contents

1	Information	4
2	Safety.....	4
2.1	Warnings and icons	4
2.2	Operator duties of care	5
2.3	Requirements to be met by operating personnel.....	6
2.4	Intended use.....	6
2.5	Basic safety measures	7
3	Transport and storage	8
3.1	Transport	8
3.2	Securing for transportation	8
3.3	Storage.....	8
4	Description	9
4.1	Application areas	9
4.2	Structure.....	9
4.3	Functional description	9
4.4	Important components.....	9
5	Specifications	10
6	Installation.....	10
6.1	Trolley	10
6.2	Tools	11
7	Operation.....	11

8	Commissioning	11
8.1	General information	11
8.2	Load chain	12
9	Safety inspection	12
10	Functional test	13
10.1	Checks before initial use	13
10.2	Functional test	13
11	Servicing	13
11.1	General information	13
11.2	Monitoring	13
11.3	Replacing the load chain	13
12	Inspection	14
12.1	Recurring inspections.....	14
12.2	Inspection - load chain.....	15
12.3	Inspection - load hook	15
12.4	Inspection - retaining catch	16
12.5	Inspection - brake system	16
12.6	Inspection - suspension and load hook bolts	16
13	Maintenance	17
13.1	Load chain	17
13.2	Pulleys	18
13.3	Load hook	18
13.4	Gear unit.....	18
13.5	Threaded load-actuated brake.....	18
13.6	Range of lubricants	19
13.7	Range of lubricants for the food industry (optional*)	19
14	Faults	19
15	Troubleshooting	20
16	Decommissioning.....	20
16.1	Temporary decommissioning	21
16.2	Final decommissioning/disposal	21
17	Spare parts list	22

1 Information

The products fulfil the European Union requirements, especially those established by the EC Machinery Directive.

Our entire company is certified to the quality assurance system ISO 9001.

The production of individual parts is subject to ongoing, strict interim checks. After installation, the products are subjected to a final inspection with overload. In Germany, lifting operations are subject to the national provisions established by the accident prevention regulations, among other provisions.

The stated performance of the devices and the validity of any warranty claims are subject to compliance with all information in these instructions.

The products are duly packaged but you should still check them for transport damage upon receipt. Please notify the transport company immediately of any complaints.

This manual enables the quick and efficient use of the device.

Figures in the manual are provided to enable a general understanding and may differ from the actual design.

→NOTE!

Please take note of the tests/inspections that are required prior to the device's initial and subsequent uses, as well as the regularly recurring tests/inspections. In countries other than Germany, the applicable national regulations must also be observed.

2 Safety

2.1 Warnings and icons

Risks and information are classified and presented as follows in this document:



DANGER!

Indicates a hazard with a high level of risk, which, if not avoided, will result in death or serious injury.



WARNING!

Indicates a hazard with a medium level of risk, which, if not avoided, could result in death or serious injury.



CAUTION!

Indicates a hazard with a low level of risk, which, if not avoided, could result in slight or moderate injury or damage to the product or its environment.

→NOTE!

Indicates user advice and other useful information.



Risk of electric shock.



Risks in potentially explosive atmospheres.

2.2 Operator duties of care

The device has been designed and built under consideration of a risk assessment and following the careful selection of the harmonised standards as well as other technical specifications to be observed. It is therefore in line with the latest technology and guarantees optimum safety.

The interface of our scope of delivery is the complete device from the suspension point to the load hook and control unit, if this is included in the order. Other equipment, tools, slings and main energy supply systems must be installed in accordance with the appropriate regulations and directives. For devices protected against explosions, all of these parts must be approved and suitable for explosion protection. Responsibility for this rests with the operator.

However, the high level of safety can only be achieved during operations if all of the necessary measures have been met. The operator's duty of care for the device involves planning these measures and checking their implementation.

The operating manual should be supplemented with further instructions, including supervisory duties and duties to communicate information in consideration of special operational features, e.g. with regard to the organisation of work, workflows or the personnel used.

The operator must, in particular, ensure that:

- the device is solely used as intended.
- the device is solely operated in a fault-free, fully functional condition and, in particular, that the functioning of the safety equipment is regularly checked.
- necessary personal protective equipment for the operating, maintenance and repair staff is available and used.
- the operating manual is always available in a legible format at the place where the device is used.
- only qualified and authorised personnel operate, service and repair the device.
- these members of personnel receive regular training on all relevant matters relating to occupational health and safety and environmental protection, and they comply with the operating manual and, in particular, the safety instructions this contains.
- any safety and warning notices affixed to the device are not removed and remain legible.
- devices specially designed for explosion protection must be grounded on site with a conductive resistance to earth of $< 10^6 \Omega$.



WARNING!

Design modifications to the device are prohibited

2.3 Requirements to be met by operating personnel

Only persons who are suitably qualified, trained and familiar with the devices may independently operate them. They must be instructed to operate the devices by the contractor.

Personnel must have read the operating manual, especially its Safety instructions section, before starting work.

This particularly applies to personnel who only work on the device occasionally, e.g. during its set-up, maintenance or servicing.

DANGER!

To prevent the most serious injuries, the following must be observed when using the device:

- Use personal protective equipment
- Tie back long hair
- Do not wear rings, chains or other jewellery
- Do not wear loose clothing

2.4 Intended use

The permissible working load limit of the devices must not be exceeded! The only exception to this rule is in the case of a potential load test by an accredited competent person prior to initial use.

- The permissible ambient temperature when operating the devices is $-20^{\circ}\text{C}/+50^{\circ}\text{C}$, or $-20^{\circ}\text{C}/+40^{\circ}\text{C}$ for all motorised devices!
- Faulty devices and load suspension equipment may only be used again once they have been repaired! Only original equipment spare parts may be used. Non-compliance with this stipulation will void the warranty.
- Independent modifications to the devices by the operator will void liability and warranty claims

Vertical lifting and lowering of non-guided loads. Loads can also be moved horizontally in conjunction with crab units and crane trolleys.

DANGER!

The following are prohibited in particular:

- Use for towing stationary loads, dragging loads and angled pulling
- Use in potentially explosive environments, unless the device has been modified for this purpose and correspondingly labelled with notices
- Use to transport people
- Use in entertainment and production sites for scenic representations
- Use if people are under the suspended load

→NOTE!

If the devices are not properly used, their safe operation cannot be guaranteed. The operator bears sole responsibility for any personal injuries or damage to property arising as a result of improper use.

2.5 Basic safety measures

- Observe the installation, operating and maintenance manuals
- Observe warning notices on the devices and in the manuals
- Observe safety clearances
- Ensure clear visibility during work
- Only use the devices as intended
- The devices are solely intended to be used to move goods. People must never be transported
- Never exceed the specified permissible working load limit
- Observe the German accident prevention regulations (UVV)
- During use outside Germany, observe the relevant national regulations
- Building walls, ceilings, floors or structures to/on which the devices are attached or suspended must be sufficiently stable. In the event of doubt, always consult a structural engineer
- After a prolonged period of non-use of the device, conduct a visual inspection of all components that affect its functioning and replace any damaged components with new original spare parts
- Never use a faulty device; listen for abnormal operating noises
- In the event of faults, immediately stop work and eliminate the fault
- Immediately report damage or faults to a responsible person
- Warn people in the immediate vicinity when using the device
- Observe the provisions on load suspension equipment established in the UVV on the positive and non-positive slinging of loads
- The sling or load must be securely hung in the load hook and positioned on the base of the hook
- The safety catches on hooks must be closed
- The housing must not lie against anything
- Stop lowering the load if the lower block or load has been set down or is prevented from being lowered any further
- The load chain must not be twisted
- Twisted chains must be untwisted before the load is hung
- The weld seam indicates that the chain links are running correctly
- The chain links must always be aligned in a single direction

 


Figure 1

- Do not crash the load or hook into anything
- Motorised operation is not permitted

Light operation	Low frequency of the biggest load	= 60 min
Medium operation	Similar frequency of small, medium and large loads	= 30 min
Heavy operation	Almost always large loads	= 15 min

* Subsequently wait at least 15 minutes for the hoist gear brake to cool

WARNING!

The following are prohibited:

- Lifting a load that exceeds the devices' nominal load
- Manipulating the slipping clutch on devices with a slipping clutch
- Continued use of worn out or damaged chains or ropes. Immediately replace these with new original parts
- Using the load chain or rope to encircle a load, place it over an edge or drag it
- Reshaping damaged load hooks (e.g. by hitting them with a hammer); they must be replaced with original hooks

3 Transport and storage

CAUTION!

Transport activities must only be conducted by qualified personnel. No liability is accepted for damage caused by improper transportation or storage.

3.1 Transport

The devices are inspected and, where applicable, duly packaged before delivery.

- Do not drop or throw the devices.
- Use suitable means of transport.

The form and means of transport are based on the local conditions.

3.2 Transport locks

NOTE!

On devices with a transport lock, this must be removed before the device is used for the first time.

3.3 Storage

- Store the device in a clean, dry place
- Use a suitable cover to protect the device against dirt, moisture and damage
- Protect chains, hooks, ropes and brakes against corrosion

4 Description

4.1 Application areas

Wherever possible, the devices should be installed in a room with a roof.

When installing the devices outdoors, they must be protected against influences that can cause weathering, e.g. rain, snow, hail, direct sunlight, dust etc. We recommend using a weather protection roof in the park position. In damp environments with major temperature fluctuations the formation of condensation poses a risk to the functioning of the device.

Ambient temperature of $-20^{\circ}\text{C}/+50^{\circ}\text{C}$, for all motorised devices $-20^{\circ}\text{C}/+40^{\circ}\text{C}$.

Humidity 100% or less, but not under water.



Use in potentially explosive atmospheres is prohibited!

4.2 Structure

Spur wheel chain blocks are manual chain hoists with suspension hooks for stationary use.

They can also be used with single-rail trolleys.

They are operated manually using the hand chain.



Figure 2

4.3 Functional description

The load is lifted or lowered by pulling on one of the legs of the lifting device's endless hand chain. A load pressure brake prevents the load from automatically lowering when the hand chain is released.

In conjunction with geared trolleys, the trolley moves left or right when the hand chain is pulled.

With push trolleys, movement occurs by pushing the load or, in the case of devices without a load, by pulling the load chain.

→NOTE!

The best way to prevent malfunctions when the device is subject to extreme ambient conditions is to use it regularly.

4.4 Important components

- Gear unit
Gear unit parts are made from premium quality materials.
- Load pressure brake
For holding the load in any position. Reinforced safety catches.
- Housing
Depending on the version, made from sheet steel or aluminium die-cast (not with Ex-version). In the case of explosion-protected devices, the housing is always made from sheet steel.

- Load chain
Pursuant to EN 818-7-T in special grades. All individual components are precisely aligned. Only use original chains.
- Load hook
Forged steel. Pivotable, thereby preventing the chain from twisting during attachment. With hook locking mechanism.
- Hook suspension point
The device has a special screw for the hook suspension point. This makes replacing the suspension hook particularly easy. Simply loosen the socket screw (A), remove the screw, replace the hook and then push the screw back in and tighten it again – done!



Figure 3

5 Specifications

Working load limit	t	0.5	1	1.5	3	5
Model		CLCB005	CLCB010	CLCB015	CLCB030	CLCB050
Number of chain legs		1	1	1	2	2
Load chain	mm	5x15	6.3x19.1	7.1x21	7.1x21	9x27
Lift when decoiling the 30 m hand chain	mm	1112	690	519	260	151
Hand chain hoist - lift	N	228	284	343	353	333
Weight with 3 m lift height	Approx. kg	7.5	13	16	24	41
Weight per m additional lift	kg	1.5	1.8	2.1	3.2	4.4

6 Installation

Installation depends on the local conditions. The device must be suspended in such a manner that it can be freely adjusted.

6.1 Trolley

For installation on a runway girder, a limit stop is required at each end of the runway. These must be attached so that the trolley's limit buffers or wheel areas strike them when moved to the end position.

Other lifting devices (e.g. forklifts, lifting platforms) are generally required as installation aids. These must be able to safely withstand the weight of the devices.

6.2 Tools

Working load limit kg		Tool	Use	
500 1000-3200 5000-10000/4 10000/2-60000	Size 1 Size 2 Size 3 Size 4	  45/50	Overload protection	
	Various		Various	
				
	Various	 	Various	

7 Operation

Lifting devices and cranes must only be operated by people who have been suitably trained. They must be instructed to operate the device by the contractor. The contractor must ensure that the operating manual is provided with the device and accessible to the operating personnel.

Lifting and lowering by pulling the endless hand chain.

Lift – Pull the right leg –
Hand chain wheel turns clockwise

Lower – Pull the left leg –
Hand chain wheel turns anti-clockwise

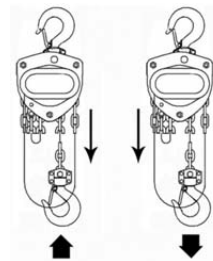


Figure 4

8 Commissioning

8.1 General information

Use in the Federal Republic of Germany:

Observe the valid national accident prevention regulations.

Use in other countries:

Inspections as above. Observe the national regulations and the information in this manual!

→NOTE!

Devices with a working load limit of up to 1000 kg and without motorised transport or lifting drives must be approved by a 'competent person' before their initial use.

Devices with a working load limit of over 1000 kg or with more than one motorised crane movement, e.g. cross travel in addition to lifting, must be approved by an 'accredited competent person' before their initial use.

'Ready-to-use devices' according to the valid national regulations with an appropriate CE declaration of conformity are exceptions in this regard.

Definition of a 'competent person' (formerly 'expert')

A 'competent person' means a person who has the technical knowledge necessary for inspecting the work equipment because of his/her vocational training, professional experience and current activity on the job.

Definition of an 'accredited competent person' (formerly 'accredited expert')

An 'accredited competent person' means a person who has knowledge in the field of the work equipment to be inspected and is familiar with the applicable national regulations on occupational health and safety, employers' insurance association regulations and generally acknowledged technical standards because of his/her specialist training and experience. This competent person must regularly inspect and provide expert evaluations on work equipment in line with the model and provisions. The accreditation is issued by authorised monitoring bodies.

8.2 Load chain

- The load chain must be correctly positioned and oiled before its initial use.
- Remove the warning sign and fixing wire from the chain.

CAUTION!

Do not use grease to lubricate the load chain
The liability and warranty shall become void without lubrication

→NOTE!

Consistently good lubrication vastly extends the chain service life

9 Safety inspection

The following must be checked before the initial use and prior to subsequent use:

- Any mounting screws are tight and pins, linchpins and safety fittings are present and secured.
- The chains are correctly positioned, oiled and in a good condition.

10 Functional test

10.1 Checks before initial use

Lift drive

- Load chains must not be twisted.
- Use transmission oil or suitable chain lubricant to lubricate the load chain before attaching the initial load.

Drive unit

- The open teeth on the drive unit must be greased.

Reel drive for geared trolley

- Check that the hand chain sits correctly; it must not be twisted and must hang freely.

10.2 Functional test

Lift drive

Check the lifting and lowering function, initially without a load.

Check the brake function with a load. The load must be held.

Trolleys

Carefully move the trolley to the end points and check the position of the end stops.

11 Servicing

11.1 General information

The purpose of all monitoring, maintenance and servicing work is to ensure that the device operates safely and reliably. It must therefore be conducted carefully.

- Only allow work to be conducted by 'competent people'.
- Only conduct work when the device is not subject to a load.
- Keep a written record of all inspection results and any measures taken.

11.2 Monitoring

The monitoring and maintenance intervals specified apply to normal conditions and single-shift operation. In the case of tougher usage conditions, e.g. frequent use under full load or certain ambient conditions such as heat, dust etc. the intervals must be accordingly shortened.

11.3 Replacing the load chain

CAUTION!

The chain must be replaced in the event of visible damage but in all events by no later than upon reaching the discard stage, i.e. if e.g. one or more dimensions shown in the table are reached when inspecting the chain or if the chain has become corroded or malleably elongated.

Whenever the chain is replaced, the chain wheels must also be inspected and replaced if necessary.

Procedure:

- Only retract the new chains without a load and exactly as the existing chains in the device.
- Loosen the chain from the end attachment and hang a laterally open chain link on it.
- To create a laterally open chain link simply grind out a piece. The opening must have the same thickness as the chain link.
- Also hang a new and oiled original chain of the same size in the laterally open chain link and retract.
- Do not install the chain twisted.
- Ensure the chain links are aligned.
- Attach the chain to the end attachment.



Figure 5

12 Inspection

12.1 Recurring inspections

Regardless of the regulations in the individual countries, the functional reliability of the lifting devices must be inspected at least once a year by a competent person or an accredited competent person in the case of cranes.

12.1.1 Parts to be checked

The following must be checked:

- Dimensions of the load chain, load hook, retaining catches, screws, locking wheels and brake pads. These must be compared with the dimensions in the table.
- Visual inspection to check for deformities, wear, cracks and corrosion.

	On commis- sioning	Daily inspec- tions	1st main- tenance after 3 months	Inspection mainte- nance every 3 months	Inspection mainte- nance every 12 months
Check screw connections	x				x
Check the lifting and lowering functions	x	x			
Check the brake function	x	x			
For lever hoists: check the chain free-running function	x	x			
Brake – check for brake pad wear					x
Check the chain wheels, locking wheels, retaining catches and screws					x
Clean and oil the load chain	x		x	x	
Load chain – check for elongation and wear					x
Load hook – check for cracks and deformation					x
Load hook – check the hook locking mechanisms	x	x			
Chain pulley bearings – check and lubricate			x		x
Check the chain pulley			x	x	
Have a competent person inspect the device (recurring inspection)					x

⚠ WARNING!

If the upper or lower thresholds are breached for one or more dimensions, or if cracks or corrosion are found, the parts must be replaced with original spare parts.

12.2 Inspection - load chain

pursuant to DIN EN 685, part 5

L11 = pitch increase over 11 chain links

L1 = pitch increase over 1 chain link

dm = average link thickness

 


Figure 6

Chain dimensions

Dimensions mm	Chain size				
	5x15	6.3x19.1	7.1x21	8x24	9x27
L11	171.4	216.6	238.8	272.1	300.8
L1	16.0	20.1	22.4	25.3	28.1
dm	4.6	5.7	6.5	7.2	8.2

⚠ WARNING!

If the table dimensions are reached due to wear or deformation, the chain must be replaced!

12.3 Inspection - load hook

Load hook

X = measuring distance hook mouth width

Y = measuring distance from hook no. 6

H = hook basic thickness

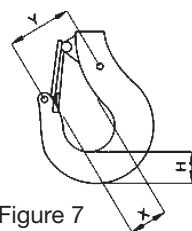


Figure 7

Table

Dimensions mm	Working load limit/chain leg								Enter the measurement data before initial use:	
	0.5/1	1t/1	1.5t/1	2t/2	3t/2	5t/2	7.5/3	10t/4		
X or Y	26.5/35	33.8/45	32.5/47	35.5/52	41.7/62.5	50/79	64/85	64/85	X or Y	m
H	16.8	21	25.2	28.3	35.6	43.2	60.4	60.4	H	m



The dimensions in the table are theoretical dimensions without tolerances.

⚠ CAUTION!

If the hook mouth dimensions are exceeded by 10% due to deformation or the minimum hook base thickness is breached by 5% due to wear, the hook must be replaced!

12.4 Inspection - retaining catch

	A	Vmin
kg	mm	mm
250	16	14.5
500	20	18.5
1000-3000	24.6	23
5000-10000	24.5	23

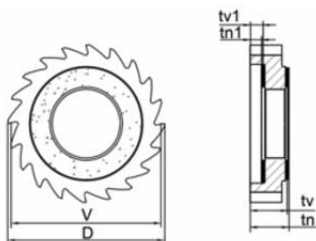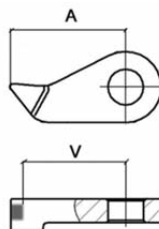

12.5 Inspection - brake system

Locking wheel with brake pads

	GB	Vmin	tn	tvmin	tn1	tv1max
kg	mm	mm	mm	mm	mm	mm
500	62	59	13	12.2	3	3.8
1000-1500	69	66	17	16.2	5	5.8
2000	82	79	16.5	15.7	4.5	5.3
3000	69	66	17	16.2	5	5.8
5000-10000	82	79	16.5	15.7	4.5	5.3

12.6 Inspection - suspension and load hook bolts

	Load hook bolt		Suspension bolt	
	dn	dvmin	dn	dvmin
kg	mm	mm	mm	mm
500	6.2	5.5	12	11.4
1000	8.5	8	12	11.4
1500-3000	10.2	9.6	16	15.2
5000-10000	13	12.2	16	15.2

13 Maintenance

13.1 Load chain

Chain wear in the link points is usually caused by insufficient chain maintenance. To ensure the optimum lubrication of the links, the chain must be lubricated at regular intervals tailored to the usage.

 
- Use penetrative lubricant, e.g. transmission oil, to lubricate the chain.
- Always lubricate the chain without a load so that the oil can moisten the links subject to wear. It is not sufficient to simply lubricate the chains externally as this does not ensure that a film of lubricant forms in the link points. The adjacent link points must always have a film of lubricant as increased chain wear otherwise occurs.
- In the case of a constant chain travel length, particular attention must be paid to the deflection point of the lifting and lowering movements.
- Carefully lubricating the chain extends its service life to about 20 times that of a dry, non-lubricated chain.
- Use petroleum or a similar cleaning agent to clean dirty chains; never heat the chain.
- In the case of ambient influences that promote wear (e.g. sand), a rock lubricant such as graphite powder should be used.
- When lubricating the chain, also check its wear status.

Use		Recommendation		Interval
Load chain		Transmission oil E.g.: FUCHS RENOLIN PG 220 or chain lubricant Do NOT use grease!	0.2 l	3 months

CAUTION!

Do not use grease to lubricate the load chain
The liability and warranty shall become void without lubrication

13.2 Pulleys

Use		Recommendation		Interval
Pulleys		FUCHS RENOLIT FEP2	As required	12 months

13.3 Load hook

- Check the load hook and pulleys once a year
- Clean the hook bearings and pulleys once a year and lubricate them with grease
- Plain bearing bushings are maintenance free
- If the bearings or plain bearing bushings are worn, the entire pulley must be replaced

13.4 Gear unit

Use		Recommendation		Interval
Load hook bearing (plain bearing bushings are maintenance free)		FUCHS RENOLIT FEP2	As required	12 months

Regular lubricant checks are required. Clean and re-lubricate the teeth after approx. 3 years. We recommend using a class EP2 lubricant or similar products. Shorter maintenance intervals are required for tougher operating conditions (e.g. dust, permanent use with nominal load etc.).

13.5 Threaded load-actuated brake

The brake pad wear is checked during the inspection. Replace the brake pads if the wear limit is reached at any point on the pad, as may be the case if the pads are unevenly worn.

CAUTION!

The brake pads must be free from cracks. Oil, grease, dirt and moisture on the pads should be avoided wherever possible as this causes increased wear.

13.6 Range of lubricants

FUCHS	SHELL	ESSO	MOBIL	TOTAL	CASTROL	KLÜBER
Renolit FEP 2	Alvania EP 2	Unirex EP 2	Mobilux EP 2	MULTIS EP2	-	-
Stabylan 5006	-	-	-	-	Optimol Viscoleb 1500	Klüberoil 4UH 1-1500

13.7 Range of lubricants for the food industry (optional*)

	SHELL	MOBIL	CASTROL
Gear unit	FM Grease HD2	Mobilegrease FM 222	-
Load chain	-	Lubricant FM 100	Optimol Viscoleb 1500
Load hook Pulleys Sprockets Drive pinion	FM Grease HD2	Mobilegrease FM 222	-

14 Faults

In the event of faults, the following must be noted:

- Faults must only be eliminated by qualified personnel
- Safeguard the devices against accidental start-up
- Use a warning sign to indicate that the device is not ready for operation
- Secure the action area of the moving device parts
- Read the 'General safety instructions' section

Troubleshooting information can be found in the table below.

To eliminate faults, contact our service department.

CAUTION!

Faults caused by worn or damaged components such as ropes, chains, chain wheels, axles, bearings, brake parts etc. must be eliminated by replacing the respective parts with original spare parts.

15 Troubleshooting

Fault	Cause	Troubleshooting
Load not lifted	Load stuck	Release the load
	Brake pads worn	Conduct maintenance and replace the brake pads
	Load chain twisted	Straighten out the load chain
	Faulty chain, gear unit or chain wheels	Conduct maintenance and replace faulty parts with original spare parts
	Retaining catch not correctly engaged	Check the retaining catch and replace it if necessary
	Retaining catch spring missing	Conduct maintenance and replace faulty parts with original spare parts
Load difficult to lift	Dirty chains, gear unit or chain wheels	Conduct maintenance; lubricate chains, gear unit and chain wheels
	Faulty chain, gear unit or chain wheels	Conduct maintenance and replace faulty parts with original spare parts
Load lifted intermittently	Retaining catch spring missing or faulty	Conduct maintenance and replace faulty parts with original spare parts
Hoist will not lift without a load	Brake spring missing	Conduct maintenance and replace faulty parts with original spare parts
Hoist does not lift over the whole distance	Hook tilted, chain twisted	Move the hook and chain into the correct positions
Brake remains closed (clamped shut)	The load hook has been pulled against the housing and clamped shut there	Release the hook, re-attach the load, lower the load, detach the load
Hoist does not lower the load	Brake too tight	Loosen the brake
	Rust has made the brake too tight	Replace rusty parts and conduct periodic inspections
Parts of the load sag when lowered	Foreign bodies between the brake parts	Remove foreign bodies; clean the area. In the event of striae on the area, replace the brake disc
Load sags when lowered	Brake discs missing, incorrectly installed or worn	Replace or correctly install the brake discs

16 Decommissioning



WARNING!

To prevent damage to the device or life-threatening injuries when decommissioning the device, the following points must be observed:

Always conduct the steps to decommission the devices in the following order:

- Secure a work area of an adequate size.
- Read the 'Safety instructions' section.
- De-installation occurs in the reverse order to installation.
- Dispose of the equipment in an environmentally-sound manner.

16.1 Temporary decommissioning

- Measures as previously.
- Read the 'Storage' and 'Transport' sections.

16.2 Final decommissioning/disposal

- Measures as previously.
- Following de-installation dispose of devices in an environmentally-sound manner based on the substances contained.

17 Spare parts list

Top hook for chain block

7311F4120331001	CLCB - 0.5 t
7311F4120451001	CLCB - 1.0 t
7311F4120501001	CLCB - 1.5 t
7311F4120541001	CLCB - 2.0 t
7311F4120581001	CLCB - 3.0 t
7311F4120651001	CLCB - 5.0 t

Hook locking mechanism for chain block

7311F4120331002	CLCB - 0.5 t
7311F4120451002	CLCB - 1.0 t
7311F4120501002	CLCB - 1.5 t
7311F4120541002	CLCB - 2.0 t
7311F4120581002	CLCB - 3.0 t
7311F4120651002	CLCB - 5.0 t

Bottom hook for chain block

7311F4120331005	CLCB - 0.5 t
7311F4120451005	CLCB - 1.0 t
7311F4120501005	CLCB - 1.5 t
7311F4120541005	CLCB - 2.0 t
7311F4120581005	CLCB - 3.0 t
7311F4120651005	CLCB - 5.0 t

Gear unit housing for chain block

7311F4120331025	CLCB - 0.5 t
7311F4120451025	CLCB - 1.0 t
7311F4120501025	CLCB - 1.5 t
7311F4120541025	CLCB - 2.0 t
7311F4120581025	CLCB - 3.0 t
7311F4120651025	CLCB - 5.0 t

Hand chain wheel cover for chain block

7311F4120331008	CLCB - 0.5 t
7311F4120451008	CLCB - 1.0 t
7311F4120501008	CLCB - 1.5 t
7311F4120541008	CLCB - 2.0 t
7311F4120581008	CLCB - 3.0 t
7311F4120651008	CLCB - 5.0 t





EC Declaration of Conformity

Acc. to the EC Machinery Directive 2006/42/EC, Appendix IIA

We hereby declare that the machine/equipment indicated below, in its design and construction and in the version that we market, conforms to the fundamental safety and health requirements of the EC Machinery Directive 2006/42/EC and the harmonized and national standards and the technical specifications below.

Any modification to the machine/equipment that the manufacturer has not authorized voids this declaration.

This declaration shall also become invalid if the machinery/equipment is not used in line with the intended use illustrated in the user manual and if the regular inspections required in accordance with the Industrial Health and Safety Ordinance and DGUV regulation 100-500 are not conducted.

Description

Chain block

**CLCB005F - CLCB010F - CLCB015F - CLCB030F
CLCB050F**

Manufacturer

Carl Stahl GmbH
Tobelstr. 2
D-73079 Sößen

Applied harmonized standards

DIN EN ISO 12100
DIN EN 13157
DIN EN 818-7

Applied national standards and technical specifications

 
 
DGUV regulation 100-500
DGUV regulations 52 and 54
Industrial Health and Safety Ordinance

Person authorised to compile the Declaration of Conformity

Michael Baumann
Carl Stahl GmbH
D-73079 Sößen

Sößen, 26/01/2015

Michael Baumann - CE agent
Name, position and signature of the agent

Kontroll- und Prüfbescheinigung		Certification of Inspection and Test	
Hiermit wird bescheinigt, dass die Abmessungen, Qualitätsmerkmale und Funktionsfähigkeiten des im Folgenden beschriebenen Gegenstandes entsprechend den geltenden Bestimmungen für Maschinen gründlich kontrolliert und unter Verwendung von öffentlich beglaubigten Prüfgeräten unter Anwendung der vorgeschriebenen Prüflast geprüft worden sind und dass die Prüfergebnisse ausnahmslos gute Ergebnisse erbracht haben.		This is to certify, that the designated size, quality and facilities of the following article have been thoroughly inspected and tested with authorized testing device by the pre-determined test load in accordance with concerned Machinery Directives and all of the are satisfactory.	
 Stirnradflaschenzug Spur wheel chain block		 Ratschzug Lever Hoist	
 Ratschzug/Flaschenzug Mini Lever Hoist/Spur wheel chain block Mini		 Carl Stahl® Carl Stahl GmbH Tobelstr. 2 73079 Sülgen www.carlstahl.de	
CLCB 005F / 500 kg Prüflast / Test load 750 kg		CLLH 0008F / 800 kg Prüflast / Test load 1200 kg	CLLM 003F / 250 kg Prüflast / Test load 375 kg
CLCB 010F / 1000 kg Prüflast / Test load 1500 kg		CLLH 0010F / 1000 kg Prüflast / Test load 1500 kg	CLLM 005F / 500 kg Prüflast / Test load 750 kg
CLCB 015F / 1500 kg Prüflast / Test load 2250 kg		CLLH 0016F / 1600 kg Prüflast / Test load 2400 kg	CLLM 075F / 750 kg Prüflast / Test load 1125 kg
CLCB 030F / 3000 kg Prüflast / Test load 4500 kg		CLLH 0025F / 2500 kg Prüflast / Test load 3750 kg	CLLM 150F / 1500 kg Prüflast / Test load 2250 kg
CLCB 050F / 5000 kg Prüflast / Test load 7500 kg		CLLH 0032F / 3200 kg Prüflast / Test load 4800 kg	
		CLLH 0063F / 6300 kg Prüflast / Test load 9450 kg	
Carl Stahl GmbH, Sülgen 		Unterschrift Michael Baumann, Dokumentationsverantwortlicher Signature Michael Baumann, Responsible for Documentation	
Datum Date			

Prüfnachweis zur Überwachung des Handhebezeuges			Inspection certificate for manual lifting devices		
1. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
2. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
3. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
4. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
5. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
6. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
7. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
8. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
9. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
10. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
11. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
12. Sicht- und Funktionsgeprüft: Visual inspection and functional test	Datum/Date:	Befund/Result:	Name des Prüfenden/Name of inspector:	Unterschrift/Signature:	
Bemerkungen/Comments:					

Die Prüfung wurde nach der Betriebssicherheitsverordnung (BetrSichV), der DGUV-Regel 100-500 Kap. 2.8 durchgeführt.
The inspection has been performed according to the national German Industrial Safety Regulation (BetrSichV) and German Social Accident Insurance (DGUV) 100-500 Chapter 2.8.

Notes

[illegible]

Notes

[illegible]

Carl Stahl GmbH

Tobelstr. 2

D-73079 Suessen

www.carlstahl-lifting.com

